



PLUS 4 MODELS
AND
4/4 SERIES II MODELS

SPARE PARTS
• LIST •

Price - 2/6

MORGAN MOTOR CO., LTD.
MALVERN LINK, WORCS.

Telephone : Malvern 106 Telegrams : Morgan Motors

INDEX

SECTION	Page
CHASSIS FRAME	6
ENGINE :—	
GASKET SET	3
CYLINDER BLOCK	3
ROCKER COVER	3
SUMP	3
ENGINE PLATE AND MOUNTINGS	3
TIMING COVER	3
CRANKSHAFT AND BEARINGS	3
CONNECTING ROD	4
PISTONS	4
VALVE GEAR AND ROCKERS	4
CAMSHAFT	5
OIL PUMP AND FILTER	5
DIPSTICK	5
FLYWHEEL	5
PETROL PUMP	5
CARBURETTOR	5
THERMOSTAT	6
AIR CLEANER	6
WATER PUMP	5
MANIFOLD	5
CLUTCH	6
COOLING SYSTEM	7
FUEL SYSTEM	8
EXHAUST SYSTEM	8
SUSPENSION :—	
FRONT	8
REAR	9
AUTO-LUBRICATION	9
HUBS—FRONT	9
WHEELS	10
BRAKES	10
STEERING	11
GEARBOX	12
TRANSMISSION	13
REAR AXLE	14
BODY DETAILS	16
ELECTRICAL	18
TOOLS	18
MISCELLANEOUS ITEMS	18

INSTRUCTIONS FOR ORDERING SPARE PARTS

Obtain your spare parts from accredited Morgan dealers or write us direct and observe the instructions following :—

TERMS.—Our terms are strictly cash and remittance should at all times accompany order, otherwise goods are sent C.O.D. if within the postage weight limit, but orders under the value of 5/- are not sent by this system in view of the additional postage fees and office formalities involved.

Prices shown in this list do not include postage or carriage, and sufficient should be added to cover.

When ordering give the chassis and engine numbers, not registration number.

Make all enquiries the subject of a separate letter. Do not embody them in your spare parts order, otherwise there will be delay in replying.

Parts sent as patterns should be clearly labelled with the sender's name and address. Instructions and remittances should not accompany patterns but should be sent separately. Patterns are not returned unless asked for at the time of ordering.

Cheques and postal orders should be made payable to the firm and crossed. Notes should in all cases be registered. When remitting by telegraphic money order a separate telegram of advice should be sent.

NOTE.—The terms "L.H." (left hand) and "R.H." (right hand) used throughout this list at all times mean "near" (passenger) side and "off" (driver's) side, respectively.

Packing Cases are chargeable but returnable.

Do not forget to give Chassis and Engine Numbers.

Prices in this list are subject to periodical revision. A quotation for engine parts not shown will be given on application.

Engine, Clutch and Gearbox parts for 4/4 Series II Models are not included. Application should be made to a Ford Depot, where some items can be obtained on an exchange basis. Except where shown, use Plus 4 part numbers.

Part No.	Article	ENGINE								
		Vanguard			TR.2			TR.3		
		£	s.	d.	£	s.	d.	£	s.	d.
GASKET SET										
V4-10-50.	Decarbonising	13	9		18	6		18	6	
CYLINDER BLOCK										
V4-10-57.	Block Assembly	31	2	6	31	2	6	31	2	6
V4-10-55.	Drain Tap	4	9		4	9		4	9	
V4-10-58.	Cylinder Head with Valve Guides ...	12	10	0	13	5	6	16	15	0
V4-10-61.	Gasket, Cylinder Head	6	6		6	6		6	6	
V4-10-157.	Liner, Cylinder	2	1	6	2	1	6	2	1	6
V4-10-158.	Gasket, liner	1	0		1	0		1	0	
SUMP										
V4-10-66.	Sump Assembly	2	6	0	2	6	0	2	6	0
V4-10-67.	Drain Plug	1	8		1	8		1	8	
V4-10-68.	Washer, Sump	2	1		2	1		2	1	
ROCKER COVER										
V4-10-62.	Cover Assembly	14	6		14	6		14	6	
V4-10-63.	Filler Cap and Breather Assembly ...	7	0		7	0		7	0	
V4-10-64.	Washer Cover	2	0		2	0		2	0	
V4-10-65.	Nut "	5			5			5		
ENGINE PLATE AND MOUNTINGS										
V4-10-69.	Front Plate	1	1	9	1	14	0	1	14	0
V4-10-61/1.	Rubber Mounting	7	0		7	0		7	0	
V4-10-75.	Bearer Bracket—R.H.	1	2	0	1	2	0	1	2	0
V4-10-76.	" " L.H.	1	3	6	1	3	6	1	3	6
V4-10-150.	Washer, front plate	2			2			2		
TIMING COVER										
V4-10-70.	Cover Assembly	7	6		7	6		7	6	
V4-10-71.	Washer Cover	2	0		2	0		2	0	
V4-10-72.	Tensioner, Chain	3	0		3	0		3	0	
CRANKSHAFT AND BEARINGS										
V4-10-73.	Crankshaft	12	19	0	12	19	0	12	19	0
V4-10-74.	Main Bearings, pair	6	6		6	6		6	6	
V4-10-160.	" " .010"	7	0		7	0		7	0	
V4-10-75.	" " .020"	7	0		7	0		7	0	
V4-10-76.	" " .030"	7	0		7	0		7	0	
V4-10-77.	" " .040"	7	7		7	7		7	7	
V4-10-78.	Thrust Washer, top	1	3		1	3		1	3	
V4-10-79.	" " bottom	1	3		1	3		1	3	
V4-10-80.	Chain Wheel	5	3		5	3		5	3	
V4-10-81.	Pulley, fan belt	4	5		10	0		10	0	
V4-10-82.	" hub	12	10		1	5	6	1	5	6
V4-10-83.	Starter Jaw Assembly	11	0		11	0		11	0	

Part No.	Article	Vanguard			TR.2			TR.3		
		£	s.	d.	£	s.	d.	£	s.	d.
CONNECTING ROD										
V4-10-84.	Assembly with bolts	2	12	4	2	12	4	2	12	4
V4-10-85.	Bush, small end	1	2		1	2		1	2	
V4-10-86.	Bearing, pair	4	6		8	0		8	0	
V4-10-161.	" .010"	4	10		8	0		8	0	
V4-10-87.	" .020"	4	10		8	0		8	0	
V4-10-88.	" .030"	5	6		9	0		9	0	
V4-10-89.	" .040"	6	3		9	9		9	9	
V4-10-90.	Bolt, connecting rod	1	5		1	5		1	5	

PISTONS										
V4-10-91.	Piston Assembly	2	12	6	2	13	6	2	13	6
V4-10-92.	" " .010"	2	8	6	2	13	6	2	13	6
V4-10-93.	" " .020"	2	8	6	2	13	6	2	13	6
V4-10-162.	" " .030"	2	10	0	2	13	6	2	13	6
V4-10-162A.	" " .040"	2	12	6	2	13	6	2	13	6
V4-10-94.	Compression Ring	2	3		1	11		1	11	
V4-10-163.	" " .010"	2	3		3	0		3	0	
V4-10-95.	" " .020"	2	6		3	0		3	0	
V4-10-96.	" " .030"	3	0		3	0		3	0	
V4-10-97.	" " .040"	3	0		3	0		3	0	
V4-10-100.	Scraper Ring	2	9		3	0		2	10	
V4-10-165.	" " .010"	2	9		3	3		3	3	
V4-10-101.	" " .020"	2	9		3	3		3	3	
V4-10-102.	" " .030"	2	9		3	3		3	3	
V4-10-166.	" " .040"	2	9		3	3		3	3	
V4-10-103.	Gudgeon Pin	6	6		6	6		6	6	
V4-10-104.	Circlip	3			3			3		

VALVE GEAR AND ROCKERS										
V4-10-105.	Tappet	3	0		3	0		3	0	
V4-10-106.	Push Rod Assembly	2	9		11	0		6	0	
V4-10-109.	Valve, inlet...	7	6		8	5		8	5	
V4-10-110.	" exhaust	9	0		19	0		19	0	
V4-10-111.	" spring collar	6			1	7		1	7	
V4-10-112.	" " outer	2	6		2	6		2	6	
V4-10-113.	" " inner	1	3		1	6		1	6	
V4-10-114.	" " auxiliary	9			9			9		
V4-10-167.	Cone, split	7			7			7		
V4-10-117.	Valve Cap	4	9		—			—		
V4-10-118.	Rocker Shaft	13	10		13	10		13	10	
V4-10-119.	" " Spring, Centre	4			4			4		
V4-10-120.	" Pedestal, drilled	3	10		3	10		3	10	
V4-10-121.	" " plain	3	1		3	1		3	1	
V4-10-122.	" Spring, intermediate	4			4			4		
V4-10-123.	" " outer	3			3			3		
V4-10-124.	Rocker No. 1 assembly with bush	7	6		7	9		7	9	
V4-10-125.	" Bush	6			6			6		
V4-10-168.	Ball Pin, adjustable	1	0		1	0		1	0	
V4-10-169.	" " nut	3			3			3		
V4-10-126.	Rocker No. 2, assembly	7	6		7	9		7	9	
V4-10-127.	Valve Guide, inlet...	1	3		1	3		1	3	
	" " exhaust	1	3		1	6		1	6	

Part No.	Article	Vanguard £ s. d.			TR.2 £ s. d.			TR.3 £ s. d.		
CAMSHAFT										
V4-10-128.	Camshaft	2	16	0	4	3	3	4	3	3
V4-10-129.	„ Bearing, front	10	0		10	0		10	0	
V4-10-171.	„ „ centre and rear	—			2	5		2	5	
V4-10-172.	„ „ intermediate... ..	—			2	2		2	2	
V4-10-130.	Chain Wheel	1	4	0	1	4	0	1	4	0
V4-10-131.	Timing Chain	17	10		17	10		17	10	
OIL PUMP AND FILTER										
V4-10-132.	Pump Assembly	1	17	6	1	17	6	1	17	6
V4-10-133.	Filter Assembly (sump)	15	0		15	0		15	0	
V4-10-134.	„ Element (Purolator)	10	10		10	10		10	10	
DIP STICK										
V4-10-135.	Dip Stick Assembly	2	3		2	6		2	6	
V4-10-173.	Washer, felt	5			5			5		
FLYWHEEL										
V4-10-136.	Flywheel assembly, including ring gear	4	10	0	4	10	0	4	10	0
V4-10-137.	Ring Gear	1	9	6	1	9	6	1	9	6
PETROL PUMP										
V4-10-138.	Petrol Pump, complete	2	15	0	2	15	0	2	15	0
V4-10-139.	Washer, pump to block	4			4			4		
V4-10-159.	Service Kit, petrol pump	7	3		7	3		7	3	
CARBURETTOR										
V4-10-140.	Carburettor	8	15	0	11	5	0	16	10	0
V4-10-174.	Needle Jet	—			3	9		3	9	
V4-10-141.	G.A. Air Jet, starter	2	6		—			—		
V4-10-142.	G.S. Petrol Jet, starter	3	8		—			—		
V4-10-143.	Main Jet	2	9		—			—		
V4-10-144.	Pilot Jet	3	0		—			—		
V4-10-145.	Choke Tube	6	8		—			—		
V4-10-146.	Float	4	10		6	9		6	9	
V4-10-188.	Needle and Seat Assembly	—			3	6		3	6	
WATER PUMP										
V4-10-179.	Water Pump (bearing housing) assembly (excludes pump body but includes fan pulley and aluminium flange)	5	8	9	5	8	9	5	8	9
V4-10-180.	Pump Body	1	3	0	1	3	0	1	3	0
V4-10-148.	Bearing Housing	18	1		18	1		18	1	
V4-10-149.	Gasket, body to housing	2			2			2		
V4-10-150.	„ „ „ cylinder block	2			2			2		
V4-10-151.	Fan Pulley, with aluminium flange	1	5	3	1	5	3	1	5	3
V4-10-152.	Fan	12	0		12	0		12	0	
V4-10-153.	Belt	7	6		7	6		7	6	
V4-10-188.	Service Reconditioned Pump (exchange)	3	10	0	3	10	0	3	10	0
MANIFOLD										
V4-10-157.	Exhaust Manifold assembly	3	16	3	3	5	0	3	5	0
V4-10-155.	Inlet „ „	3	5	0	2	17	6	2	18	0
V4-10-156.	Gasket, manifold	1	0		1	0		1	0	

Part No.	Article	Vanguard £ s. d.	TR.2 £ s. d.	TR.3 £ s. d.
THERMOSTAT				
V4-10-181.	Thermostat Housing	1 3 0	1 3 0	1 3 0
V4-10-182.	" Unit	1 0 0	1 0 0	1 0 0
V4-10-183.	" Elbow—water outlet	9 9	9 9	9 9
V4-10-184.	Gasket, elbow	2	2	2

AIR CLEANER				
V4-10-185.	Cleaner Assembly complete An Air Cleaner can also be supplied for the 4/4 (ii) model. Price £1 15s. 0d. The figures shown for Plus 4 models do not include alterations to bonnet.	—	5 0 0	—
V4-10-186.	Adaptor for manifold	—	3 10 0	—
V4-10-187.	Gasket, adaptor	—	6	—

Part No. Plus 4	4/4 (ii)	Article	Price £ s. d.	Price revision £ s. d.
CHASSIS FRAME				
V4-1-61.	4/4-1-500.	Frame complete with front (less floor boards)	35 0 0	
V4-5-62.	4/4-1-501.	Pedal Assembly	2 15 0	
V4-1-63.		Front Cross Axle Assembly	9 18 0	
V4-1-71.		Tie Rod, with nuts	2 9	
V4-1-72.		" " Bracket	1 9	
V4-1-91.		Side Stay	2 9	
V4-1-76.		Rear Cross Member, 2-seater and Coupe (up to 1954)	3 19 9	
V4-1-77.		Rear Cross Member, 4-seater (up to 1954)	3 19 0	
V4-1-113.		Floor Boards, set	4 15 0	
V4-1-27.		Cover for Jack aperture	2 0	
V4-1-20.		Rear Axle Rubber	2 0	
V4-1-67.		End Lug for cross tube Top—R.H.	13 9	
V4-1-68.		" " " " " L.H.	13 9	
V4-1-69.		" " " " " Bottom	7 6	
V4-1-70.		Plate, bottom end lug	3 3	

CLUTCH				
V4-11-44.		Cover Assembly (containing springs, pressure plate, and toggles)	5 3 11	
V4-11-48.		Cover only	1 2 4	
V4-11-49.		Thrust Spring	1 2	
V4-11-50.		Pressure Plate	1 10 10	
V4-11-51.		Eye Bolt	1 9	
V4-11-52.		Nut, Eye Bolt	3	
V4-11-53.		Release Lever	1 5	
V4-11-54.		Anti-rattle Spring	10	
V4-11-45.		Driven Plate Assembly	4 7 8	
V4-11-47.		Facings and Rivets, driven plate	2 10	
V4-11-39.		Sleeve, thrust with carbon block	1 6	

Part No. Plus 4	4/4 (ii)	Article	Price £ s. d.	Price revision £ s. d.
V4-11-38.		Carbon Block	6 3	
V4-11-34.		Eye Bolt, sleeve... ..	2 0	
V4-11-35.		Rod, thrust less yoke ends	1 6	
V4-11-39.		Yoke End, L.H. Thread	1 6	
V4-11-40.		" " R.H.	1 6	
V4-11-35A.		Lock Nut for Yoke End		
V4-11-33.		Lever, actuating	3 3	
V4-11-41.		Spring, return	10	
V4-11-36.		Pedal	11 0	
V4-11-22.		Rubber, Pedal	2 0	
4/4-11-500.		Master Cylinder	2 7 0	
4/4-11-501.		Pipe, master cylinder	11 6	
4/4-5-501.		Distance Piece	16 6	
4/4-5-179.		Repair, kit	5 3	
V4-11-29.		Lever, pedal shaft	3 0	
V4-11-32.		Link, lever to rod	8	
V4-11-42.		Dowl Pin, long	10	
V4-11-43.		" " short	10	
V4-5-70.	4/4-1-505.	Pedal Bracket	5 6	
V4-11-30.		Housing and Transmission Tube	9 18 0	
V4-11-46.		Rubber Ring, " "	9 3	

COOLING SYSTEM				
V4-2-1.		Radiator assembly, external type (includes grille, badge, tap, hinges, number plate, etc.)	31 12 6	
V4-2-60.	4/4-2-501.	Radiator, under bonnet type (includes filler cap and tap)	16 0 9	
V4-2-44.		Radiator Stoneguard, old type radiator	5 4 6	
V4-2-64.		Radiator Grille, chromium plated, latest type radiator	5 4 6	
V4-2-63.	4/4-2-504.	Cowl	5 4 6	
V4-1-103.	4/4-2-505.	Badge	16 6	
V4-2-2.		Filler Cap, outside type radiator	6 10	
V4-2-61.		" " latest type	10 0	
V4-2-7.		Drain tap and washer	5 6	
V4-2-28.		Tape and Rivets	10 3	
V4-2-42.	4/4-2-506.	Support Bracket	4 0	
V4-2-39.	4/4-2-507.	Rubber Mounting Pad	7	
V4-2-6.	4/4-2-500.	Block	11 0 0	
V4-2-8.		Shell, chromium plated, external type	9 0 0	
V4-2-5.		Relief Valve	3 9	
V4-2-59.		Hose, Top	5 0	
V4-2-45.		" Bottom	7 3	
4/4-3-503.		" Top	6 4	
4/4-3-502.		" Bottom	3 4	
V4-2-17/18/19.		Number Plate and hinge assembly, external type radiator	19 3	
V4-2-19.		Hinged Number Plate, external type radiator	5 0	
V4-2-55.		Hinge Plate assembly, external type radiator (used when bumper fitted)	10 6	
V4-2-43.		Tie Bar	5 6	
V4-2-65.		Box member for bottom of cowl	16 6	

Part No. Plus 4	4/4 (ii)	Article	Price £ s. d.	Price revision £ s. d.
FUEL SYSTEM				
V4-9-54.	4/4-9-500.	Tank—2-seater	4 0 0	
V4-9-57.		" Coupe	4 0 0	
V4-9-58.		" 4-seater	4 0 0	
V4-9-4.		Drain Plug	10	
V4-9-9.	Filler.	Filler Cap with neck, 2-seater and coupe	1 13 0	
V4-2-2.		Filler Cap, 4-seater	6 10	
V4-9-9B.		" " Rubber Joint, 4-seater ...	11 0	
V4-9-9A.		" " " Coupe	3 9	
V4-2-47.		Joint Clip	1 3	
V4-9-52.		Accelerator Pedal Assy.	11 6	
V4-9-47.		" Cable Assy., R.H. Drive...	5 6	
V4-9-16A.		" " " L.H. "	7 3	

EXHAUST SYSTEM				
V4-8-20.	4/4-2-502.	Bend, Manifold to flexible pipe with flange—Vanguard	15 5	
		TR. Type	15 11	
V4-8-30.		Flexible Pipe, Vanguard	19 3	
V4-8-34.		" TR. Type	1 0 4	
V4-8-22.	4/4-8-501.	Silencer, Vanguard	2 1 3	
V4-8-33.		" TR. Type	2 1 3	
V4-8-24.	4/4-8-513.	Tail Pipe	1 3 3	
V4-8-21.		Clip, flexible pipe	2 6	
V4-8-29.		Clip, Silencer	2 9	
V4-8-32.		Flange, Manifold	7 9	
V4-8-31.		Washer, flange	1 3	
V4-8-23.		Rubber, silencer, plain... ..	4	
V4-8-28.		" " shaped	6	
V4-8-16.		" " plain... ..	6	
V4-8-17.		" Tail Pipe, shaped	6	
V4-8-25.		Bracket, silencer, front	2 6	
V4-8-26.		" " rear	2 6	
V4-8-27.		" Tail Pipe	7	

SUSPENSION FRONT				
V4-3-48.	4/4-3-500.	Main Spring	16 6	
V4-3-4.		Rebound Spring	6 6	
V4-3-45.		Dust Cover	3 3	
V4-3-41.		Sliding and Stub Axle Assy.—R.H. ...	4 7 6	
V4-3-42.		" " " L.H.	4 7 6	
V4-3-39.		King Pin	15 6	
V4-3-40.		Union Bolt, auto-lubrication	5 6	
V4-3-9.		Bush	9 0	
V4-3-57.		Steering Damper with Thrust Pad, R.H.	10 0	
V4-3-57A.		" " " L.H.	10 0	
V4-3-55.		" " Blade only, L.H.	2 9	
V4-3-55A.		" " " R.H.	2 9	
V4-3-56.		Clamp for Blade	9	
V4-3-131.		Aluminium Block, R.H.	11 6	
V4-3-131A.		" " L.H.	11 6	
V4-3-54.		Thrust Pad for Blade	7 0	

Part No. Plus 4	4/4 (ii)	Article	Price £ s. d.	Price revision £ s. d.
V4-3-51.	4/4-3-503.	Shock Absorber	2 2 0	
V4-3-46.		" " Fixing Pin	2 3	
V4-3-47.		" " " Bracket	3 3	
V4-3-50.		" " Rubber, Top	1 0	
V4-3-50A.		" " Bottom	1 0	
V4-3-68.	4/4-3-501.	Rubber, bumper	1 0	
		Steering Damper Blade adjustment washer	1	

AUTO LUBRICATION— FRONT SUSPENSION

V4-1-92.		Valve Assembly	1 10 3	
V4-5-90.		Oil Pipe assembly, valve to stub axle ...	16 6	
V4-1-87.		" " " flexible pipe	3 9	
V4-1-88.		" " " oil gauge	9 3	
V4-1-114.		Flexible Pipe	6 6	

SUSPENSION—REAR

V4-3-20.	4/4-3-502.	Spring—5 Leaf	2 5 0	
		" 6 "	2 7 6	
		" 7 "	2 10 0	
V4-3-31/2/3.		Hanger Bolt with washer and distance piece	2 0	
V4-3-34.		Silentbloc Bush	6 9	
V4-3-52/3.		Shock Absorber, L.H. or R.H.	2 14 6	
V4-1-60A.		" " Fixing Plate... ..	8 3	
V4-3-62A.		" " Links	9 6	
V4-1-19.		Spring Slipper, Old Type Suspension .	8 3	
V4-1-29.		Pin " " "	1 0	
V4-3-51A.		Shackle Assembly " " "	13 9	

HUBS

(State type when ordering)

V4-4-2.		Hub and combined brake drum— 1½" wide brake	3 17 6	
		1½" "	4 7 6	
V4-4-17.		Hub, front, Wire Wheel Type	5 8 0	
V4-4-18.		" rear, " " "	5 8 0	
V4-4-21.		Brake Drum, Wire Wheel Type, front or rear	2 0 0	
V4-4-26.		Drum Locating Screw	3	
V4-4-27.		Hub Fixing Set Screw, hexagon head ...	3	
V4-4-28.		Serrated Washer	1	
V4-4-11.		Knock-on Cap, L. or R., Chromium Plated	1 15 0	
V4-15-22.		Spare Wheel Bracket	5 0	
V4-15-2.		Clamp Screw	11 0	
V4-15-204.		Adaptor Disc	6 0	
V4-4-12.		Hub Bearing—Inner	1 1 0	
V4-4-13.		" " Outer	10 6	
V4-4-8.		Bearing Spacer	2 9	
V4-4-14.		Oil Seal	4 0	
V4-4-3.		Locking Ring, Inner Ball Race	2 9	
V4-4-5A.		Wheel Stud	2 5	
V4-4-10.		Stud Securing Nut	10	
V4-4-9.		Washer	3	
V4-4-11.		Hub End Cap (hexagon)	7 6	

[illegible]

Part No.	Article	Price £ s. d.	Price revision £ s. d.
V4-5-90/12.	PIPES, HOSE, SUNDRY ITEMS		
V4-5-209.	Four-way piece, old type	8 3	
V4-5-178.	Five-way piece	8 0	
V4-5-90/5.	Pipe, L.H. Master Cylinder to five-way	4 2	
V4-5-90/6.	" R.H.	6 3	
V4-5-90/7.	" five-way to front, L.H.	6 3	
V4-5-90/2.	" " " R.H.	7 6	
V4-5-90/8.	Hose, front, L. or R.	15 0	
V4-5-90/13.	Pipe, five-way to rear hose	8 6	
V4-5-90/3.	Tee piece hose	14 3	
V4-5-90/4.	Pipe, to rear, L.H.	4 6	
V4-5-204.	" " " R.H.	6 3	
V4-5-205.	Supply tank assembly, Old type	14 6	
V4-5-206.	Master cylinder $\frac{3}{4}$ " old type	2 4 6	
V4-5-207.	Stop light switch	6 0	
V4-5-208.	Repair kit, master cylinder	4 0	
	Master cylinder $\frac{5}{8}$ " latest type... ..	2 5 0	
	STEERING		
	Burman steering and parts are not now stocked, and prices relate to cam gear steering now in use. Thompson track rod also replaces the original type. Prices of conversion of the steering of early Plus 4 models on application.		
	COLUMN		
V4-7-111.	Column and box assembly, R.H. drive	9 9 0	
V4-7-117.	" " " L.H. " "	9 9 0	
V4-7-126.	Box with outer tube	3 0 0	
V4-7-127.	Cam with steering tube	3 12 6	
V4-7-128.	Rocker Shaft assembly	1 10 0	
V4-7-129.	Cover assembly	8 6	
V4-7-130.	Thrust Screw	1 0	
V4-7-131.	" " Lock Nut	6	
V4-7-132.	Oil Plug	4	
V4-7-133.	" " Washer	2	
V4-7-134.	Cover Washer	1	
V4-7-135.	Ball Cage Assembly	2 0	
V4-7-136.	End Cover	2 0	
V4-7-137.	Washer, end cover	1	
V4-7-138.	Shim, .0024	2	
V4-7-139.	" .005"	2	
V4-7-140.	" .010"	2	
V4-7-141.	Ball Cup	4 10	
V4-7-142.	Felt Bush	1 3	
V4-7-113.	Wheel Nut	2 6	
V4-7-119.	Drop Arm	1 9 3	
V4-7-114.	Steering Wheel, 3-Spoke	3 6 0	
V4-7-122.	" " Brooklands Type	5 2 6	
V4-7-63.	Column Support Bar, 2 and 4-seater...	7 3	
V4-7-64.	" " " Coupe	7 3	
V4-7-112.	Clip steering column, 1 $\frac{1}{4}$ " X 71"	10 0	
V4-7-118.	Wheel Stop	4 0	
V4-7-24.	Rubber Collar	3 9	
V4-7-115.	Bracket column to chassis	1 9 0	
V4-7-110.	" Scuttle	8 3	

REAR AXLE

V4-14-5.	U Bolt	...	2	2
V4-14-2.	" " with shock absorber fixing	...	6	0
V4-14-11.	Drive gear and pinion assembly, comprising crown wheel and pinion, nut, cotter and lock straps, 4.09 or 3.73 ratio	...	13	0 0
V4-5-93.	Balance lever, hand brake	...	1	13 0
V4-5-78.	Clip, Brake Pipe	...	2	9
V4-14-12.	Gear Carrier and cover assembly	...	10	2
V4 14 13.	Companion Flange Assembly	...	1	5 10
V4-14-14.	Rear Hub Assembly	...	3	6 1
V4-14-15.	Hub Oil Seal Assembly	...	6	0
V4-14-16.	Diff. Case Assembly	...	3	11 4
V4-14-17.	" " bearing Cap Screw	...	9	
V4-14-18.	" " " " lock nut	...	2	
V4-14-19.	Drive Gear Screw	...	10	
V4-14-20.	" " Lock strap	...	3	
V4-14-21.	Diff. Case	...	4	6 3
V4-14-22.	" " Side Gear	...	1	8 9
V4-14-23.	" " " Thrust Washer	...	7	
V4-14-24.	" " Pinion Mate	...	14	4
V4-14-25.	" " " Thrust Washer	...	4	
V4-14-26.	" " " Shaft	...	8	5
V4-14-27.	" " " Lock Pin	...	4	
V4-14-28.	Axle Shaft Spacer	...	8	0
V4-14-29.	Diff. Bearing Shim, .003"	...	3	
V4-14-30.	" " " .005"	...	3	
V4-14-31.	" " " .010"	...	3	
V4 14 32.	" " " .030"	...	3	
V4-14-33.	Pinion Bearing Shim, inner, .003"	...	3	
V4-14-34.	" " " .005"	...	3	
V4-14-35.	" " " .010"	...	3	
V4-14-36.	" " " outer, .003"	...	3	
V4-14-37.	" " " .005"	...	3	
V4-14-38.	" " " .010"	...	3	
V4-14-39.	" " " .030"	...	3	
V4-14-40.	" " Spacer	...	3	10
V4-14-41.	" Oil Slinger	...	3	
V4-14-42.	" Oil Seal	...	4	0
V4-14-44.	" Dust Shield	...	7	
V4-14-43.	" Oil Seal Gasket	...	2	
V4-14-45.	" Nut	...	1	6
V4-14-46.	" Washer	...	3	
V4-14-48.	Axle Shaft	...	3	14 9
V4-14-49.	" " Nut	...	1	11
V4-14-50.	" " Washer	...	3	
V4-14-52.	" " Key	...	1	9
V4-14-76.	" " Cotter	...	2	
V4-14-53.	" " Oil Seal	...	4	6
V4-14-54.	Hub Bearing retaining plate	...	1	6
V4-14-55.	" " Shim, .003"	...	4	
V4-14-56.	" " " .005"	...	3	
V4-14-57.	" " " .010"	...	3	
V4-14-58.	" " " .030"	...	9	
V4-14-59.	" Oil Seal Gasket	...	2	

V4-14-60.	Brake Back Plate Bolt	...	3	
V4-14-61.	" " " Nut	...	2	
V4-14-62.	" " " Lock Washer	...	2	
V4-14-63.	Filler Drain Plug	...	11	
V4-14-64.	Gear Carrier Cover	...	10	2
V4-14-65.	" " " Gasket	...	1	2
V4-14-66.	" " " Screw	...	3	
V4-14-67.	" " " Lock Washer	...	2	
V4-14-68.	Hub Bearing Grease Nipple	...	2	3
V4-14-78.	Diff. Bearing Cap	...	14	4
V4-14-79.	Wheel Stud	...	4	2
V4-14-71.	Pinion Bearing, outer	...	Maker's List	
V4-14-72.	" " Inner	...	"	"
V4-14-69.	Diff. Bearing	...	"	"
V4-14-73.	Hub	...	"	"
4/4-14-502.	U Bolt	...	2	2
4/4-14-503.	" " with Shock Absorber fixing	...	6	0
4/4-15-509.	Drive gear and pinion assembly, comprising crown wheel and pinion, nut, cotter, bolts and lock strap, 4.44 ratio	...	9	13 11
4/4 14-504.	Balance Lever, Hand Brake	...	3	0 6
4/4-14-505.	Clip, Brake Pipe	...	2	9
4/4-14-510.	Gear Carrier and cover assembly	...	9	2
4/4-14-511.	Companion Flange Assembly	...	1	5 10
4/4-14-512.	Rear Hub Assembly	...	4	7 5
4/4-14-513.	Hub Oil Seal Assembly	...	5	0
4/4-14-514.	Diff. Case Assembly	...	7	15 3
4/4-14-515.	" " Bearing Cap Screw	...	7	
4/4-14-516.	" " " Locknut	...	2	
4/4-14-517.	Drive Gear Screw	...	9	
4/4-14-518.	" " Lockstrap	...	3	
4/4-14-519.	Diff. Case	...	3	14 9
4/4-14-520.	" " Side Gear	...	1	3 0
4/4-14-521.	" " " Thrust Washer	...	3	
4/4-14-522.	" " Pinion Mate	...	12	8
4/4-14-523.	" " " Thrust Washer	...	3	
4/4-14-524.	" " " Shaft	...	9	2
4/4-14-525.	" " " Lock Pin	...	4	
4/4-14-526.	Axle Shaft Spacer	...	6	11
4/4-14-527.	Diff. Bearing Shim, .003"	...	2	
4/4-14-528.	" " " .005"	...	2	
4/4-14-529.	" " " .010"	...	2	
4/4-14-530.	" " " .030"	...	2	
4/4-14-531.	Pinion Bearing Shim, Inner, .003"	...	3	
4/4-14-532.	" " " .005"	...	3	
4/4-14-533.	" " " .010"	...	3	
4/4-14-534.	" " " Outer, .003"	...	3	
4/4-14-535.	" " " .005"	...	3	
4/4-14-536.	" " " .010"	...	3	
4/4-14-537.	" " " .030"	...	3	
4/4-14-538.	" Oil Slinger	...	4	
4/4-14-539.	" Oil Seal	...	5	0
4/4-14-540.	" Dust Shield	...	6	
4/4-14-541.	" Oil Seal Gasket	...	2	
4/4-14-542.	" " Felt Washer	...	7	
4/4-14-543.	" Nut	...	2	1
4/4 14-544.	" Washer	...	2	

Part No.
Plus 4

4/4 (ii)	Article	Price £ s. d.	Price revision £ s. d.
4/4-14-545.	Axle Shaft	3 5 6	
4/4-14-546.	" " Nut	9	
4/4-14-547.	" " Washer	2	
4/4-14-548.	" " Cotter...	2	
4/4-14-549.	" " Key	1 2	
4/4-14-550.	" " Oil Seal	2 3	
4/4-14-551.	Hub Bearing retaining Plate	2 10	
4/4-14-552.	" " Shim, .003"	4	
4/4-14-553.	" " " .005"	3	
4/4-14-554.	" " " .010"	3	
4/4-14-555.	" " " .030"	7	
4/4-14-556.	" Oil Seal Gasket	2	
4/4-14-557.	Brake Back Plate Bolt	3	
4/4-14-558.	" " " Nut	7	
4/4-14-559.	" " " Lock Washer	2	
4/4-14-560.	Filler, Drain Plug	1 0	
4/4-14-561.	Gear Carrier Cover	8 3	
4/4-14-562.	" " " Gasket	10	
4/4-14-563.	" " " Screw	3	
4/4-14-564.	" " " Lockwasher	2	
4/4-14-565.	Hub Bearing Grease Nipple	9	
4/4-14-566.	Wheel Stud	4 2	
4/4-14-567.	Pinion Bearing, Outer	Maker's List	
4/4-14-568.	" " Inner	" "	
4/4-14-569.	Diff. Bearing	" "	
4/4-14-570.	Hub Bearing	" "	

BODY DETAILS

V4-15-107.	Mudguard, Front R.H.	7 16 9
V4-15-107A.	" " L.H.	7 16 9
V4-15-109.	" " Rear, R.H.	5 5 0
V4-15-108.	" " L.H.	5 5 0
V4-15-31/31A.	Tread Rubber with moulding, screws and nuts	10 6
V4-1-95/6.	Valance Stay—front R.H.	3 3
V4-1-97/8.	" " L.H.	3 3
V4-15-87.	" " rear	2 9
V4-1-93.	Stay, main, front	3 10
V4-15-171.	Bolt and Nut (mushroom head)	6

BONNET

V4-15-121.	Bonnet with hinge and end pieces, less fasteners—2 and 4-seater	8 5 0
V4-15-122.	" " Coupe	1 18 6
V4-15-96/7/8.	Bonnet Hinge with centre strip	5 0
V4-15-97.	" " End Piece, front or rear	8 2
V4-15-67.	Fastener Assembly	2 9
V4-15-169.	Knob only	2 9
V4-15-103.	Buffer Stop	2 9

WINDSCREEN

V4-15-110.	Windscreen assembly, adjustable type,	
V4-15-125.	2-seater	15 0 0
V4-15-111.	4-seater	15 10 0
V4-15-139.	Coupe	9 0 0
V4-15-140.	Screen Pillar, R.H.	2 10 0
	" " L.H.	2 10 0

Part No.
Plus 4

Article	Price £ s. d.	Price revision £ s. d.
V4-15-143.	Rubber Pad	3 0
V4-15-141.	Screw, pillar	3
V4-15-142.	Bolt and Nut fixing	4
V4-15-144.	Lift-the-dot Stud, top rail	6
V4-15-164.	Knurled Nut for adjustable type screen	5 6
V4-15-115.	Side Window, Coupe, L.H.	9 0 0
V4-15-114.	" " R.H.	9 0 0
V4-15-209.	Windscreen assy. non-adjustable type,	
	2-seater	15 0 0
V4-15-210.	4-seater	15 10 0
	Coupe	9 0 0
V4-15-211.	Pillar with body bracket	2 10 0
V4-15-213.	" less "	1 0 0
V4-15-214.	Screw C/P, hexagon head for fixing pillar to body bracket	1 0
V4-15-215.	Weather rubber	5 3
SIDE SCREENS		
V4-15-12.	Side Screens, 2-seater, R.H.	6 3 9
V4-15-13.	" " L.H.	6 3 9
V4-15-126/9.	" " 4-seater, per set	22 0 0
V4-15-126.	" " Front R.H. each	7 10 0
V4-15-128.	" " Rear, " "	3 10 0
V4-15-127.	" " Front, L.H. "	7 10 0
V4-15-129.	" " Rear, L.H. "	3 10 0
V4-15-164.	Fixing Bracket and Knurled Nut	11 0
"	Moulding for side, each, top, bottom or side	9 0

DOORS

V4-15-37.	Door lock with striker plate, Coupe, R. or L.H.	1 7 6
V4-15-36.	Door Handle, outside	10 0
V4-15-167.	" " inside	9 6
	(Striker plate not supplied as separate item.)	
V4-15-162.	Hinge, Coupe	7 9
V4-15-163.	" 2 and 4-seater	5 0
V4-15-166.	Strap, door stop, Coupe	4 0
V4-15-155.	Dovetail, Rubber	1 0
V4-15-39.	Door Lock 2 and 4-seater, R. or L.	1 2 0

SEATS AND SQUABS

V4-15-133.	Seat Frame—4-seater, R.H.	5 5 0
V4-15-134.	" " L.H.	5 5 0
V4-15-135.	Cushion, 4-seater, Front	3 7 3
V4-15-136.	" " Rear	4 2 6
V4-15-170.	" complete, 2-seater and Coupe	2 4 3
V4-15-43.	" Interior, air	1 10 0
V4-15-23.	Clamp Plate Adjustment	1 8
V4-15-161.	Seat Runner	4 9
V4-15-90.	Squab—2-seater and Coupe	13 15 0
V4-15-137.	" 4- " "	13 15 0

FACIA

V4-15-149.	Facia Board, 2 and 4-seater	3 13 3
V4-15-150.	" " Coupe	3 13 3

Part No.

Article

Price Price revision
£ s. d. £ s. d.

BUMPERS

V4-15-159.
V4-15-160.
"

Bumper front, with over-riders	...	5	15	0
Over-rider, rear, with brackets	...	1	7	6
Mounting Tube complete	...	1	13	0
Bumper, Rear, with over-riders	...	5	15	0

(Unsuitable for cars previous to 1954 models.)

ELECTRICAL, FACIA AND PANEL SUNDRIES

V4-16-2.
V4-16-14.
V4-16-11.
V4-16-31.
V4-16-31/1.
V4-16-31/2.
V4-16-100.

Lamp Bar, external radiator type	...	2	15	0
" " with support tubes	...	4	1	6
Support Tube with lugs	...	13	3	
Speedometer flexible drive	...	1	2	6
" " " Inner only	...	11	3	
" " " Outer "	...	11	3	
Choke control complete	...	15	0	

Lamps and other electricalities and Instruments as Maker's List.

NOTE.—Most electrical items are obtainable at exchange prices.

MISCELLANEOUS ITEMS

V4-17-33.
V4-17-30.
V4-17-29.
V4-17-32.
V4-17-36.
V4-17-41.

Licence Holder	...	4	0	
Driving Mirror	...	11	0	
Towing Bar (obtainable on request)	...			
Luggage Grid	...	11	10	0
Badge Bar with 2 Badge Clips	...	1	15	0
Spare Clips, each	...	2	0	

TOOLS

V4-17-14.
V4-17-23.
V4-17-15.
V4-17-17.
V4-17-31.

Jack	...	1	12	6
Starting Handle	...	16	6	
Tyre Inflator	...	1	12	6
Oil Can	...	3	9	

V4-17-18.
V4-17-16.
V4-17-24.
V4-17-24A.

Tool Roll and Tools (comprising separate items detailed)	...	2	10	0
Tool Roll	...	3	3	
Grease Gun	...	9	6	
Feeler Gauge	...	1	4	

V4-17-25.
V4-17-26.
V4-17-27.
V4-17-28.
V4-17-28A.
V4-17-2.
V4-17-5.
V4-17-6.
V4-17-8.
V4-17-12.
V4-17-13.

Screwdriver and feeler gauge for distributor	...	1	6	
Tube Spanner .51" and .57" A/F.	...	3	0	
" " .69" " .83" A/F.	...	3	3	
Open ended Spanner .38" and .44" A/F.	...	2	0	
" " .51" " .57" A/F.	...	3	0	
" " .62" " .75" A/F.	...	3	6	
Valve Tool	...	6	6	
Pliers	...	5	6	
Screwdriver	...	2	9	
Tommy Bar	...	2	6	
Adjustable Spanner	...	7	3	
Wheel Nut Spanner	...	7	3	

V4-17-42.

Hub Drawer, Disc Whee type, suitable for front wheels only	...	3	15	0
Hub Drawer, Wire Wheel type hub	...	7	15	0

V4-17-43.